

Installation & Maintenance Instructions

INSTALLATION

1. This unit is designed to be installed vertically as shown (plug on top). A typical installation would be clamped to a wall behind or adjacent to the ice machine near the water supply line.
2. The lower connection is the water inlet connected to the water supply line.
3. The upper connection is the outlet and must be connected to the ice machine.
4. Make sure that the cell has the Delrin insulators on the top and bottom before it is inserted into the water treatment unit housing.
5. To insure a drip-free seal, apply thread sealer on the 1-1/2" plug threads before use.

MAINTENANCE


The manufacturer recommends that the cell be removed and inspected at least twice per year for buildup of mineral deposits. The cell can be scrubbed with an abrasive pad (eg. SOS pad) to remove any accretions which may be found on it's surface. Some local water conditions may require more frequent cleaning of the cell. If mineral deposits are noticed on any internal surface of the ice machine, it is an indication that the cell needs to be cleaned.

NOTE: Before reinserting the cell, make sure that the insulators are attached on both ends. The cell will not function properly without these insulators in place.

WARRANTY

Vogt Ice warrants the Goldenrod to be free from defects in material and workmanship for a period of 1-year from the date of installation.

Contact us for Larger G.P.M. or special applications.

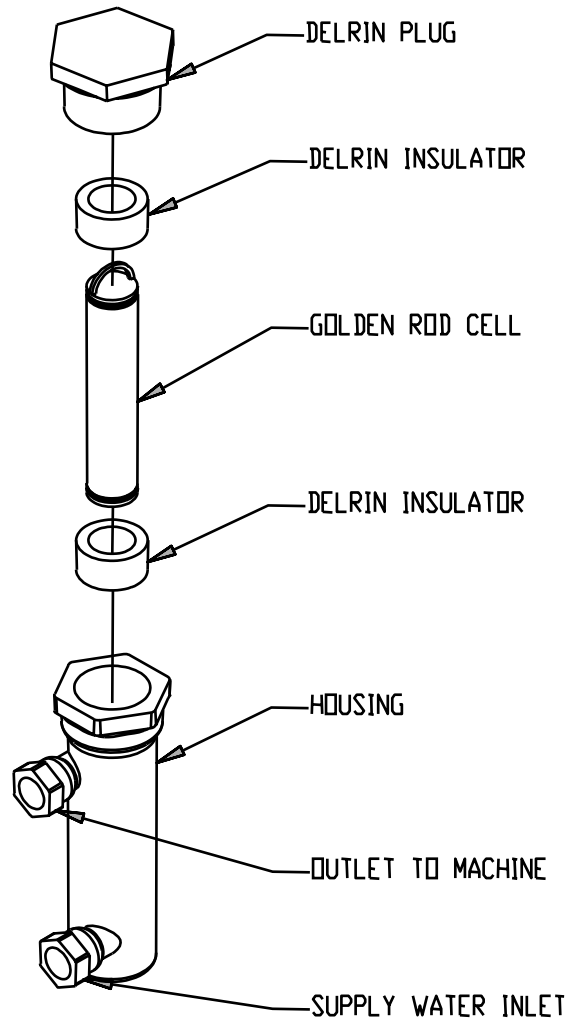

Goldenrod Specifications

<u>Application</u>	<u>Part No</u>	<u>Maximum G.P.M.</u>	<u>Connections</u>
HE Series	12A2195W0501	13	1/2" FPT
P118F-P34	12A2195W0901	25	3/4" FPT
Small Icemakers	12A2195W65	3.5	3/8" FPT
Residential	12A2195W12	30	3/4" FPT